

## VOLTMETER & DATA CANES QUICK REFERENCE GUIDE

### Reference Electrode


- Screw any ¼-20 **Reference Electrode** into the bottom of Voltmeter OR Data Cane.



### Voltmeter Cane

- Attach the **Pop Socket** to the desired multimeter.
- Place the meter on top of the Voltmeter Cane meter plate and lock the Pop Socket into place.
- Adjust the Meter Plate Side Support brackets using the **Black Knob** located on the back of the Meter Plate as necessary.
- Attach the **Red & Black Cable** to the side of the reel/cane.

MAX METER WIDTH: 5 INCHES

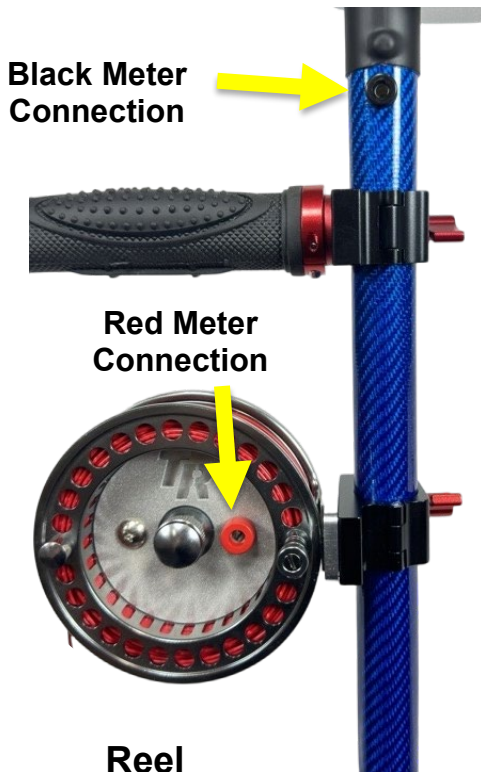

- Reel**
- Comes Standard with 75 feet of red #22AWG military spec wire.

- Clamp**
- Ensure the Washer is on the outside of the clamp as shown. This ensures the clamp will fully tighten against the cane.

**CAUTION!**  
**DO NOT USE THIS PRODUCT IN A HIGH-VOLTAGE ENVIRONMENT**

## VOLTMETER & DATA CANES QUICK REFERENCE GUIDE

### Data Cane

- Place any tablet onto the Data Cane tablet holder.
- Tablets can be positioned horizontally or vertically as preferred. Adjust the tablet holder to the position that best accommodates the tablet.
- To reposition the tablet holder, loosen the black knob located on the back of the plate.



### Tablet Support with Foam

TABLET WIDTH:  
4.7 INCHES - 13 INCHES

### Black Knob & Second Mounting Option



\*\*AUTO-ADJUSTING  
TABLET SUPPORT\*\*



### Anti-Spin Washer

### Anti-Spin Washer

- To prevent the top plate from spinning, ensure the **rubber washer** is placed between the Voltmeter/Data Cane plates and the blue carbon fiber cane.

**CAUTION!**  
**DO NOT USE THIS PRODUCT IN A HIGH-VOLTAGE ENVIRONMENT**